

PREMIUM STERILIZER
haegroo

PREMIUM STERILIZER
haegroo



Haegroo is an open-type sterilizer with harmless
to human, it can be used with comfortn and relief.
www.haegroo.com

PREMIUM STERILIZER

Haegroo

Address: 38 Yeongtong-ro 323 beon-gil, Yeongtong-gu, Suwon-si, Gyeonggi-do, 16676, South Korea

Customer Service: 82-31-546-6450

Email: sunwave01@naver.com

Contents

001 Company Introduction



002 Product Introduction

- **V2**
 - Product Image
 - Product Characteristic
- **FFH**
 - Product Image
 - Product Characteristic
- **Universal**
 - Product Image
 - Product Characteristic



Haegroo creates a safe and healthy living environment for family, friends, and colleagues. Haegroo is the technology that is based on comfortable and safe life.

We realizes technology with products and services of “home care” fused with IT technology for people.

V2 Certificate



Antibacteria Test




Colon Bacillus Test




Patent of eradicate of drosophila & Sterilization & Antibacteria & Dry

FFH Certificate

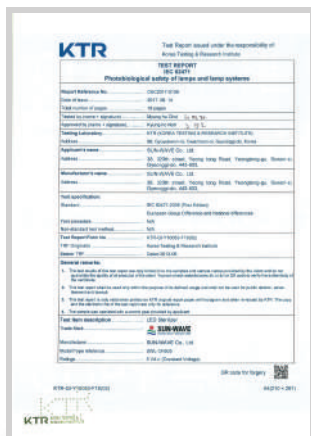

Photobiological Safety

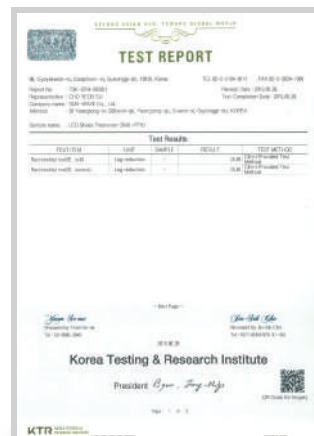


Antibacteria Test




Athlete's Foot Test

Universal Certificate

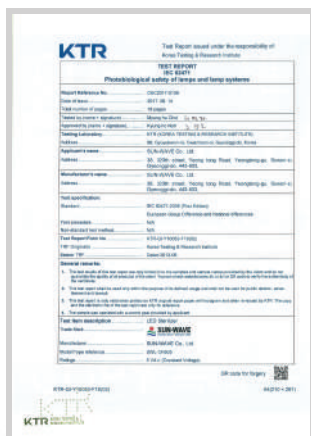

Photobiological Safety

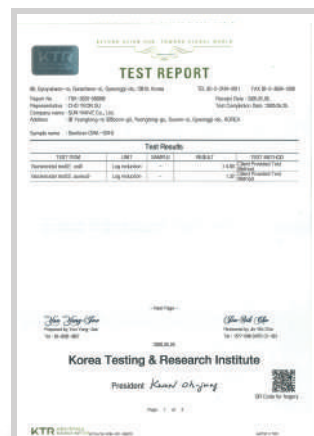

Antibacteria Test



Lithium Polymer Battery

HAEGROO use LED sterilization technology of motif of nature sun light sterilization, it is the most safest sterilization technology in the world.

Technology made of light

Haegroo's sterilization light effectively sterilizes only bacteria through oxidative stress that cause damage to the cell main composition of lipid, nucleic acid ect., leading to cell strain and death.

Easy and safe technology for everyone.


Haegroo's sterilization method as natural sun light sterilization and it is safer and easier than any other sterilizer.


Safe technology for every application.

Haegroo's sterilization light is not ultraviolet, so it is a safe technology for every application as various shoes, clothes, no worry about plastic discoloration.

Safe space sterilization technology

Haegroo's sterilization is optimization technology for space sterilization without any space restrictions.

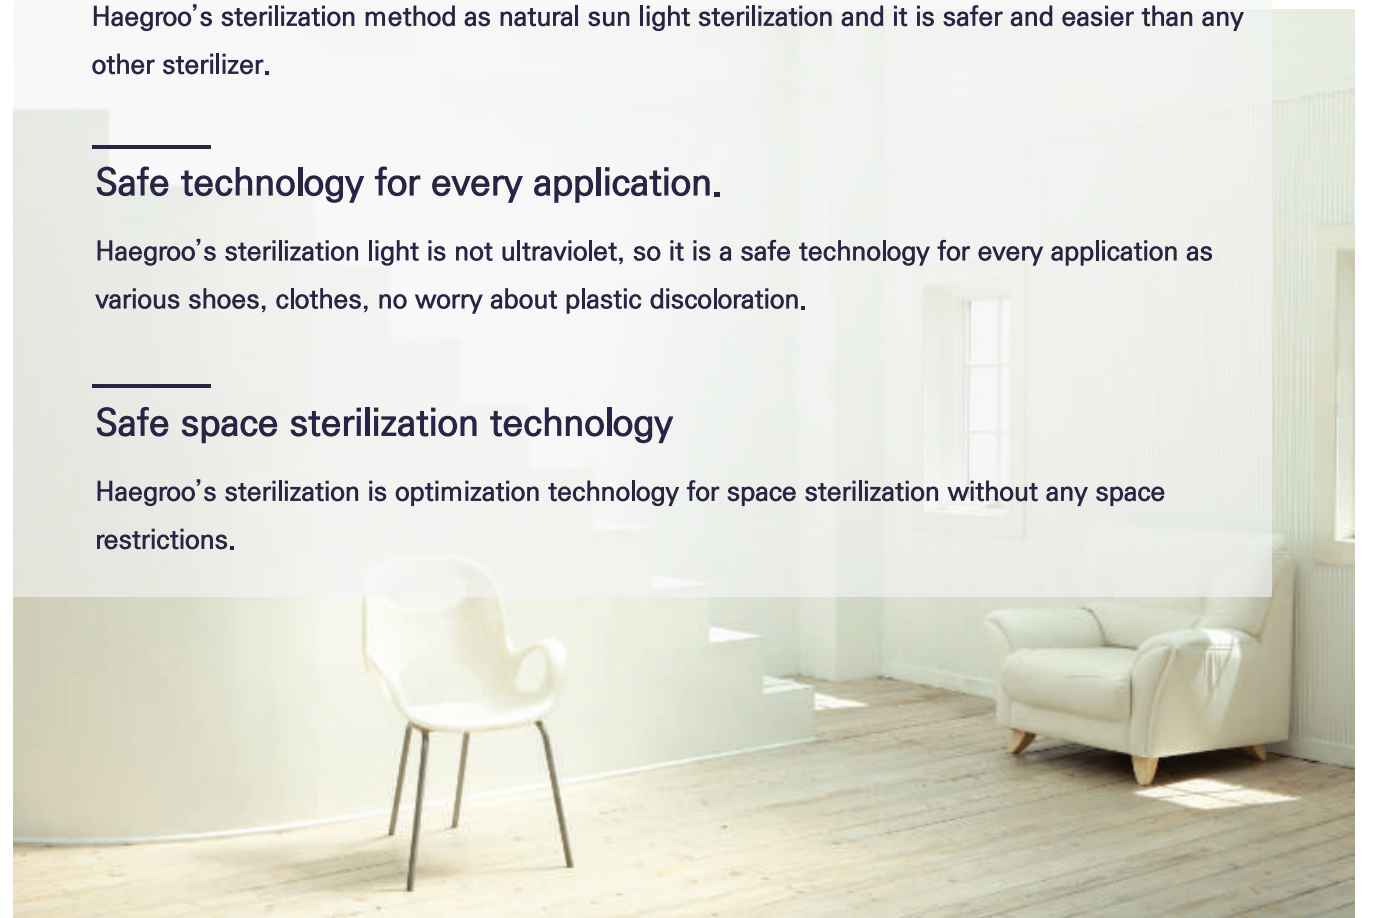

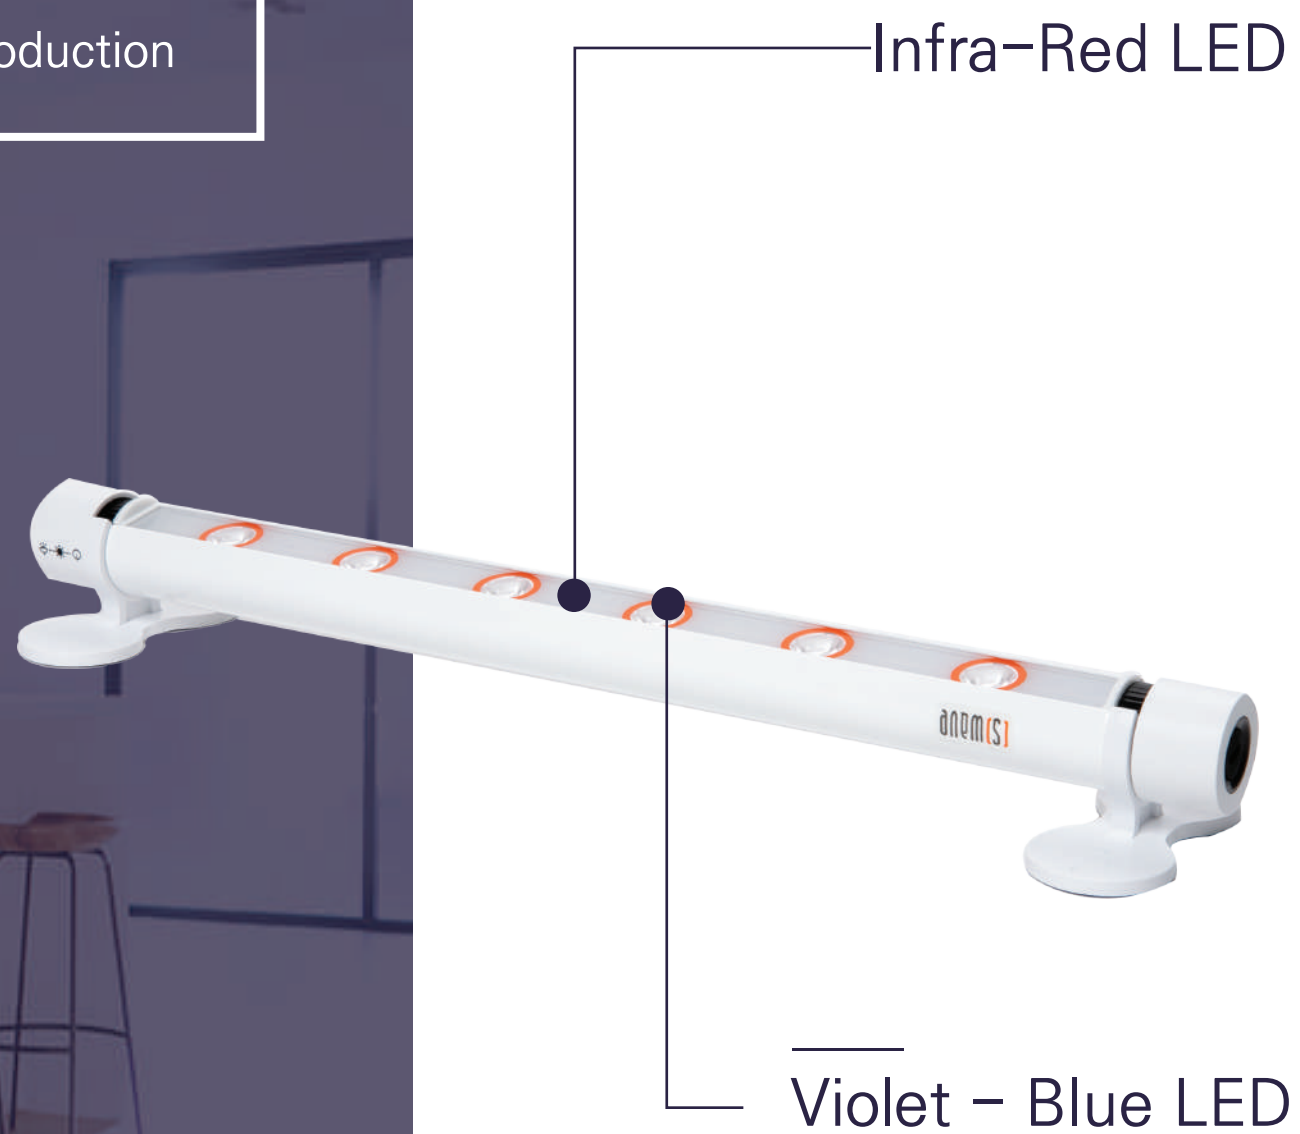

V2 have two types of mode, just like sterilization mode and lighting mode, so you can use it according to your convenience. It is a sterilizer with white tone neatness and stylish design.

Different functions depending on button



Sterilization mode



Lighting mode

Lighting mode


Press button 1st time is the sterilization mode, press button 2nd time is the lighting mode, You can change it for your convenience.




on / off



Power supply connect socket

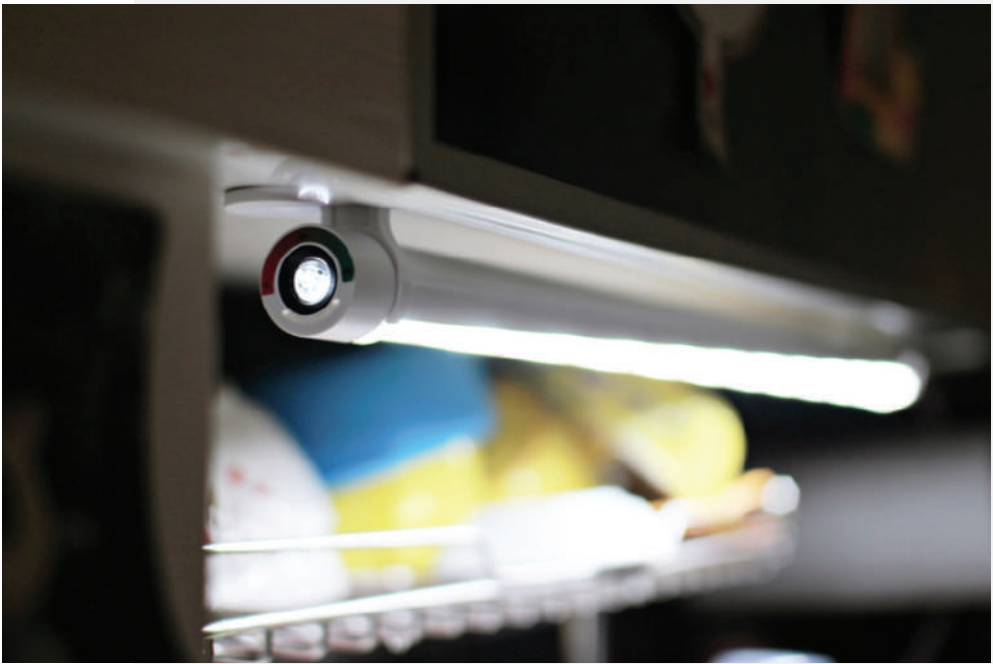


Kitchen light

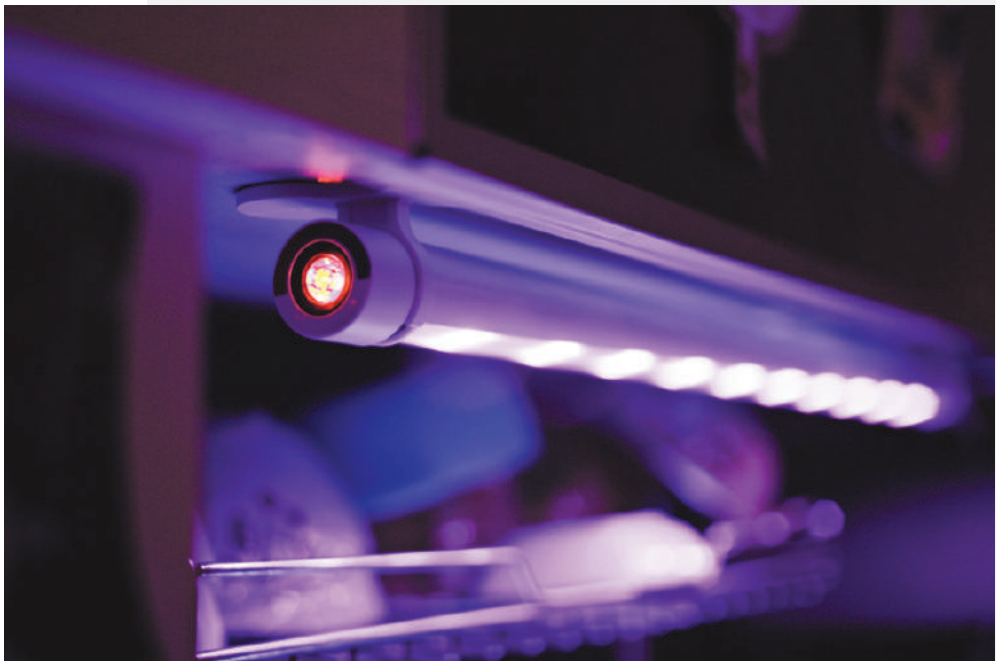

Kitchen sterilization

V2 can be installed and used in places that need sterilization and comfortable such as a kitchen, children's room, pet house. The led light is harmless to human body, so it can be used safely.

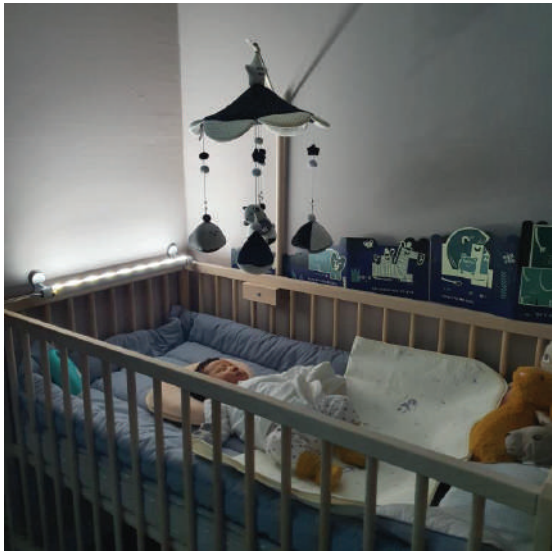

Children's room light



Pet house sterilization

001

V2 installation method and details



Attach the holder to
the main body.



Remove the sticker
from the holder.



Attach the place that
you want to sterilize.



Connect the enclosed
adapter to the sterilizer
and plug into the power
outlet.




Product Name	V2(350mm, 500mm, 650mm)
Model Name	SWL-V2350 / SWL-V2500 / SWL-V2650
Regular Voltage	5V DC, 2.5A / 5V DC, 3A
Power Consumption	6W / 9W / 12W
Size / Weight	350mm : 155g / 500mm : 205g / 650mm : 255g
Material	Aluminum, PC, ABS
Product Composition	Main Body, Adapter, Holder (Large / Small)

002 FFH Product Introduction



FFH is the harmless sterilizer to human, it is possible to use 30,000 hours by LED technology. It can sterilization, deodorization, antibacteria, drying with cleanness. It is a sterilizer that has own cradle for convenient and management.

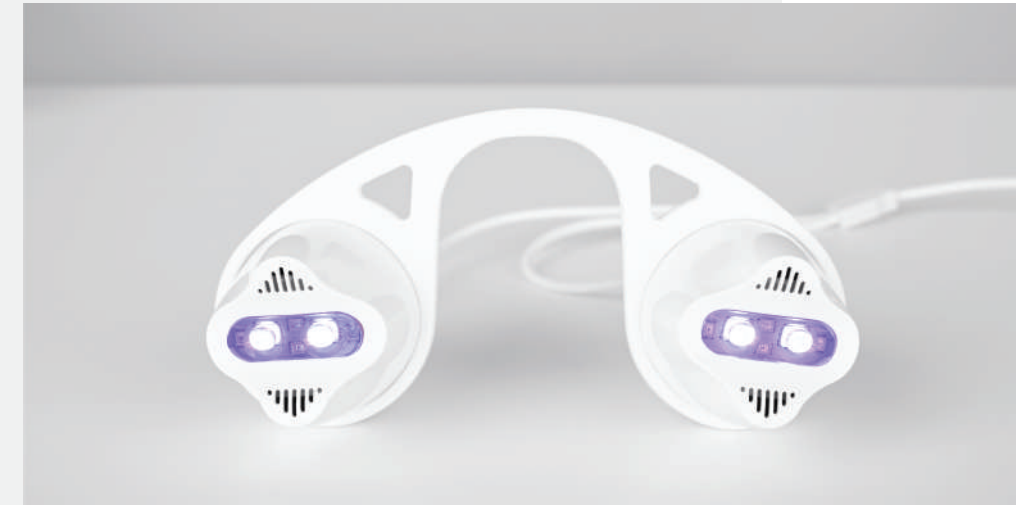


Timer function

When it connecting FFH to Power supply, starting timer function mode and sterilize 2 hours.



Apply to low noise fan

Using low noise fan, noise is low also improved the dry function.



FFH can be used to various shoes, it can sterilization and also possible drying.



It is possible to use anywhere without no restriction by portable battery.



002
FFH
installation
method
and details



Connect the Y-Cable to each main body of FFH's micro 5pin socket.



Connect the Y-Cable's usb socket to the power supply.



Connect the FFH's Cradle to FFH's two main bodys.



Put FFH into shoes by suitable angle.



Product Name	FFH
Model Name	SWL-FFH
Regular Voltage	5V DC, 1.5A over
Power Consumption	3W
Size / Weight	50mm x 70mm / 40g
Material	Heat-resisting ABS / Silicon
Product Composition	Main 2 bodies , FFH's Y-Cable, FHH's Cradle, Pouch

003 Universal Product Introduction



Universal have inner battery so it can used anywhere. And there are magnetic and iron plate so it can used very convenient.

Different functions
depending on button



Operation method

Lighting Function

Press power button then starting sterilization. Press button 1st time, it have 30 mintue timer function, press button 2nd time, it continuous mode sterilization. Press button 3rd time, the device power off and stopped sterilization.



Holder Function

Universal is smaller size than one-handed, it can easily take and move the Universal for sterilization, and it is very useful



003
Universal
installation
method
and details



Remove the attached
sticker from the
product.



Attach the product on
iron wall or iron plate.



Attach the product by
cradle.



Use the favorite angle
and adjust.



Product Name	Universal
Model Name	SWL-SDH
Regular Voltage	5V DC, 2A over
Power Consumption	5W
Size / Weight	90mm x 40mm / 110g
Material	ABS
Product Composition	Product Composition: Main Body, Cradle, Iron plate, Pouch